



 BradyJet™

J7300

Unleash your true colours

Industrial excellence. Innovative ease. Inkjet elevated.

COLOUR LABEL PRINTER



Full colour. Complete durability.

THE TOTAL PACKAGE

Make a statement with inkjet made for industrial spaces.

Pivot through a demanding print queue with the BradyJet™ J7300 Colour Label Printer. Make an impact with vibrant full colour. Print on industrial-strength labels. And say goodbye to time-wasting setup thanks to built-in LabelSense™ print technology. Any colour, any information - do exactly what the job demands from the production line to the lab with the J7300.



Set up in seconds

Just drop, lock and go. LabelSense™ technology instantly recognises and sets up label rolls and inks, and prints on the very first label.



Print any colour, job after job

Make labels that are unmistakable. Dual CMY and true black (K) ink cartridges deliver vibrant colours and deeper darks.



Make labels that last

Full colour and durability now work together. Instant-drying inks and indoor/outdoor-durable labels resist water, chemicals and abrasions.



Work into your workflows

Label creation software is included. Windows® driver pulls in third-party software and PDFs. Connect it all via USB, Wi-Fi or ethernet.



Learn more at
www.bradyeurope.com/J7300
or scan to watch the
overview video.



PRINT READY, SET, GO!

Power it on. Get it done.

With the power of automatic LabelSense™ print technology, the J7300 stands ready to print whatever you need at a moment's notice. And because you only need blank-white label material, you're ready to go from sharp barcodes to colour-coded lab labels to vivid full-colour photo tags - all with zero to minimal material changes and waste.

KEY FEATURES



20-second loading

- ▶ Drop-lock-print technology
- ▶ Printer instantly recognises label rolls and ink cartridges
- ▶ Auto setup eliminates manual calibration and threading



Prints on the first label

- ▶ Minimal waste
- ▶ No manual trial and error
- ▶ Streamlined label inventory and changeovers



Any colour, any information - fast

- ▶ Colours closely approach or meet ANSI, GHS/CLP, BS 5609, ISO and arc flash compliance
- ▶ Vibrant graphics, photos and logos
- ▶ True black ink cartridge for sharp barcodes and clear printed text

Enjoy fast, industrial-grade colour and production for variable print jobs.



Labels that last years

- ▶ Industrial-strength labels last up to 2 years outdoors and even longer indoors
- ▶ Instant-drying ink won't smudge, smear or spot
- ▶ Labels and inks boast water, chemical and abrasion resistance



Seamless create and connect

- ▶ USB, Wi-Fi or ethernet connectivity
- ▶ Brady Workstation premade templates, graphics keyword search and colour palettes
- ▶ Optimised Windows driver pulls in PDFs and third-party software



Information at a glance

- ▶ LED lighting communicates real-time printer status
- ▶ Clear cover for print job visibility
- ▶ Print Utility dashboard helps you plan, budget and troubleshoot

 **BradyJet™ J7300** Colour Label Printer

Power and production **FROM ON TO OUTPUT**

Do your best work with a printer built to handle a variety of applications, dynamic colour needs and changing label data.

Sustainable design

Label cartridges made with recyclable components and minimal plastic.

45.72 m roll capacity

Longer material rolls reduce changeovers and keep print jobs printing.

Rugged construction

Solid construction stands up to industrial conditions.

LED lighting

Reactive lighting gives you real-time printer status alerts.



Clear cover
Get a view into what's printing and when.

Tilt LCD touchscreen
Pause and resume jobs and get onboard assistance.

10.16 cm output
Print the labels you need up to 10.16 cm wide.



A CMY + true black (K)

Dual ink cartridges mix more vibrant colours and deeper darks.




B Auto cutter

Cuts off material after a job, after a label or not at all.



C Connectivity

Connect how you need via USB, Wi-Fi or ethernet.

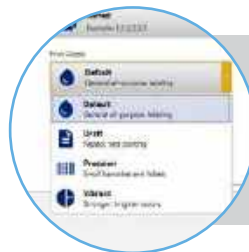

D Print modes

Four selectable modes adjust ink usage to optimise colours.



E Maintenance

Lifetime maintenance bay eliminates replacements.

BUILT-IN SMARTS

from start to success

Loaded with time-saving, cost-saving software, the J7300 gives you visibility and command of the entire process.

Print Utility Dashboard

Plan, budget and troubleshoot from anywhere.



Remote monitoring

Troubleshoot print jobs and initiate maintenance cycles from anywhere.



Real-time printer health

Get ink cartridge, label roll and printer alerts.



Connected solutions

Connect, command and switch between multiple users and printers.



Job cost calculator

Receive average usage and cost breakdowns by label material and ink.



Exporting

Download and share job history, usage and more.



Brady Workstation Labelling Software

Get everything you need to create the right label fast.




Premade label layouts

Print common labels custom-worded to your needs.



Regulatory labelling

Find best-match colour palettes, standard templates, wording and more.

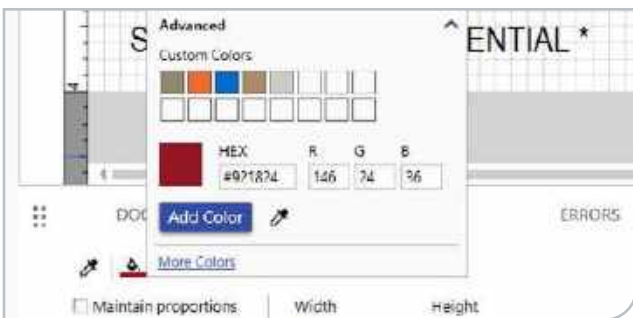

Colour capture

Select any colour you need and save for future use.



Accessible graphics library

Search and filter by keyword, regulation or agency.

Optimised Windows® Driver

Connect seamlessly to your data without error or delay.

► Coordinated communication

Printer, driver and Print Utility pass information back and forth to ensure continuous printing and real-time updates to ink and material levels.

► PDF ready

Easily pull in PDFs for fast printing of custom jobs and one-off requests.

► 3rd party software compatible

Connect to the labelling software of your choice in addition to included Brady Workstation.

THE J7300 PRINTER

Now with LabelSense™ print technology

The silent partner of the modern printing pro

Let the technology do the work. You take the credit. Maximise performance and drive down costs with the J7300 and LabelSense™ print technology. This advanced built-in system delivers exclusive functionality where the printer “talks” to the high-performance Brady Authenticated materials and inks to power many innovative, enhanced and automatic features you only get from Brady.



Fast setup

No more manual hassles. The J7300 effortlessly identifies and calibrates label materials and inks to set up in seconds. Simply drop, lock and go.



Consistent print accuracy

Enjoy unparalleled accuracy as the printer continuously fine-tunes settings to ensure optimal print quality.



Cost-efficient adjustments

Minimise waste, maximise productivity and print on the very first label with automated adjustments and maintenance to inks and label rolls.



Brilliant colours

SMART OPERATION

Get better with BradyJet inks. Designed specifically for the J7300, BradyJet ink cartridges produce vibrant, accurate colours, last long and deliver value in every drop.

▶ Separate strengths. Combined power.



True black ink cartridge delivers a deep black, darker tones, reliable barcode readability and sharp text.

CMY ink cartridge delivers vibrant, full-colour labels that demand attention.

Avoid going dry mid-print

Get a view into ink usage for past jobs via the Print Utility dashboard to plan timely changeovers. Plus, the printer's LED lighting will switch to orange if an ink cartridge is running low.





Integrated inks and printhead ensure minimal mess, cleaning and adjustments.



Formulated for performance and savings

- ▶ Patented, enhanced topcoats instantly dry inks to eliminate smudges, smears and spots
- ▶ Automatic maintenance cycles ensure printheads don't dry out between uses
- ▶ Self-contained cartridges drop into printer with a click
- ▶ Specially designed cartridge holds up to 50% more ink for longer use, fewer changeovers and less cartridge waste



Smart cell chips enable auto setup and maintenance to prevent clogging.

Art. No.	Order Reference	Description
176504	P-CMY-1	CMY Ink Cartridge for BradyJet™ J7300 Colour Label Printer
176505	P-K-1	K True Black Ink Cartridge for BradyJet™ J7300 Colour Label Printer
177431	P-1CMY2K	Ink Multipack for BradyJet™ J7300 Colour Label Printer (1x CMY, 2x K)
177432	P-2CMY1K	Ink Multipack for BradyJet™ J7300 Colour Label Printer (2x CMY, 1x K)

Ready for anyone. Design any way.

PRINT ANYTHING

Unleash your true colours with the BradyJet™ J7300 Colour Label Printer.



J7300 Printer Kits and Software

Built for industrial demands from the production line to the lab

- ▶ Auto setup, auto calibration and minimal waste
- ▶ Accurate full colour for variable print jobs
- ▶ Dual CMY and true black (K) ink cartridges
- ▶ Precise printing on labels up to 10.16 cm wide
- ▶ Industrial-grade labels and inks

Maximise your J7300 printing experience using Brady Workstation label creation software.



BradyJet J7300 printers

Ships with the free Brady Workstation Basic software that includes fundamental apps and features to create labels.

Article No.	Order Reference	Description
176883	J7300-EU	BradyJet™ J7300 Colour Label Printer EU
176884	J7300-W-EU	BradyJet™ J7300 Colour Label Printer, Wi-Fi, EU

Article No.	Order Reference	Description
322658	J7300-UK	BradyJet™ J7300 Colour Label Printer UK
322659	J7300-W-UK	BradyJet™ J7300 Colour Label Printer, Wi-Fi, UK

This BradyJet™ J7300 Printer ships in a cardboard box with a CMY Ink Cartridge with built in Printhead, a Black Ink cartridge with built in Printhead, a Brady Workstation Basic Software, a J-Align roll, a media starter B-2595 Vinyl roll, an AC Adapter, a Power Cord, a USB cable and a USB Flash Drive with product information.



BradyJet J7300 kits

Ships with a license for the Brady Workstation suite of your preference: Product & Wire Identification, Safety & Facility Identification, or Lab Identification, enabling easy creation of a wide range of labels and signs.

Article No.	Order Reference	Description
322660	J7300-EU-BWS	BradyJet™ J7300 Colour Label Printer EU + Brady Workstation Suite
322661	J7300-UK-BWS	BradyJet™ J7300 Colour Label Printer UK + Brady Workstation Suite

Article No.	Order Reference	Description
322666	J7300-W-EU-BWS	BradyJet™ J7300 Colour Label Printer, Wi-Fi, EU + Brady Workstation Suite
322667	J7300-W-UK-BWS	BradyJet™ J7300 Colour Label Printer, Wi-Fi, UK + Brady Workstation Suite

This BradyJet™ J7300 Printer ships in a cardboard box with a CMY Ink Cartridge with built in Printhead, a Black Ink cartridge with built in Printhead, a license for Brady Workstation Software suites, a J-Align roll, a media starter B-2595 Vinyl roll, an AC Adapter, a Power Cord, a USB cable and a USB Flash Drive with product information.

LABEL MATERIALS




Get the right label from the right company

Designed for you. Made by Brady. Print on materials built for the work you do and the environments you face. Label right on the toughest surfaces around. And label faster with LabelSense™ technology built into every roll cartridge for automatic setup, calibration and printing on the very first label.




SAFETY & FACILITY

Pipe Markers

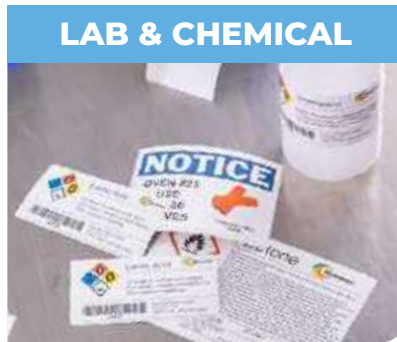

LAB & CHEMICAL

General Laboratory

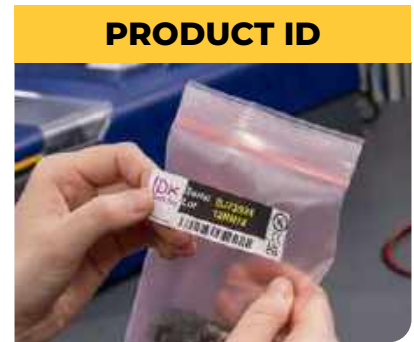

PRODUCT ID

Barcodes/QR Codes



Signage



GHS/CLP Labels



Asset ID



Lockout Tagout



Specimen



Arc Flash Labels



Energy Source Tags



Storage & Disposal



Bins


BradyGrip® Print-on Hook Labels featuring VELCRO® Brand Hook

(B-2414)

- Organise and identify wires and cables using colour with this easily repositionable print-and-place material
- Ideal for wire and cable labelling



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Length B (m)	Labels per Roll
	176590	JC-1000-2414	25.40	22.86	1

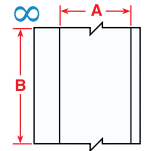


UL Approved Polyester Labels

(B-2475)

- UL safety verification, extra-durable and resistant to abrasions, chemicals, oils and solvents
- Ideal for instructional signage and diagrams, UL product/component ID, work in process, electrical panels, asset labelling, and bin/general labelling



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
	176574	JC-1125-2475	28.58	-	45.72	1
	176575	JC-2250-2475	57.15	-	45.72	1
	176576	JC-4000-2475	101.60	-	45.72	1
	176591	J-59-2475	25.40	12.70	-	1000
	176592	J-136-2475	38.10	19.05	-	1000
	176593	J-235-2475	38.10	25.40	-	1000
	176594	J-137-2475	50.80	25.40	-	1000
	176595	J-18-2475	76.20	25.40	-	1000
	176596	J-19-2475	76.20	50.80	-	750
	176597	J-55-2475	101.60	50.80	-	750
	176598	J-76-2475	101.60	76.20	-	500
	176599	J-25-2475	101.60	152.40	-	300

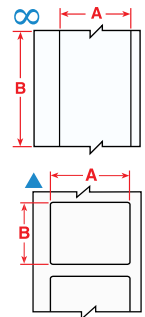


Freezerbondz™ Cryogenic Polyester Labels

(B-2492)

- Apply directly to pre-frozen glass, plastic and stainless steel – labels withstand chemicals, abrasions, storage in liquid nitrogen and -196°C - 130°C temperatures
- Ideal for cryogenic applications in labs or any curved, frozen surface



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Labels per Roll
	176641	J-59-2492	25.40	12.70	1000
	176642	J-179-2492	25.40	25.40	1000
	176643	J-250-2492	25.40	12.70	1000
	176644	J-249-2492	25.40	9.53	1000
	176645	J-251-2492	25.40	12.70	1000
	176646	J-156-2492	48.26	25.40	1000
	176647	J-152-2492	25.40	9.53	1000

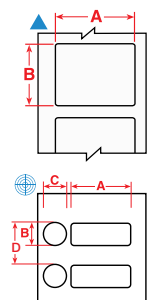


Magnetic Labels

(B-2509)

- Repositionable labels withstand moderate heat, mild chemicals, oil and water
- Ideal for warehousing racks, bins and storage



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Length B (m)	Labels per Roll
∞	170450	JC-2500-2509	63.50	7.62	1
∞	170451	JC-4250-2509	107.95	7.62	1

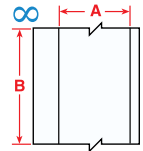


General Purpose Paper Labels

(B-2550)

- Light duty, low cost and high contrast with excellent smear resistance
- Ideal for barcoding, quality and control (testing/production, circle labels, date/time), and warehousing racks, bins and storage



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
∞	170471	JC-4000-2550	101.60	-	45.72	1
▲	170472	J-18-2550	76.20	25.40	-	1000
∞	176587	JC-1125-2550	28.58	-	45.72	1
∞	176588	JC-2250-2550	57.15	-	45.72	1
▲	176621	J-19-2550	76.20	50.80	-	750
▲	176622	J-261-2550	74.93	109.98	-	300
▲	176623	J-262-2550	104.90	154.94	-	250

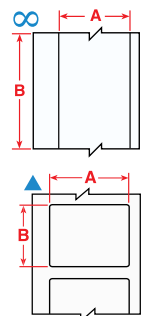


Polyester Tags

(B-2551)

- Thick, polyester tagstock is compliant for accident prevention (OSHA 1910.145) and lockout (OSHA 1910.147) tags
- Ideal for confined space, lockout, maintenance and energy source tags and labels, warehouse marking, and visual workplace labelling



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
🔒	170466	J-392-2551	82.55	133.35	-	200
+	170467	J-374-2551	76.20	38.10	-	500
∞	170468	JC-3250-2551	101.60	-	45.72	1
∞	176589	JC-2500-2551	63.50	-	12.24	1

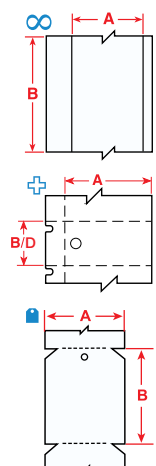


Polyester Labels

(B-2569)

- This versatile solution fits a wide range of applications on smooth surfaces
- Ideal for Lean/5S, general facility, pipe marking, OSHA/ANSI, PPE, machine labels, instructional signage, diagrams, quality and control labelling, and lockout tagout identification



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
∞	170452	JC-4000-2569	101.60	-	45.72	1
▲	170453	J-261-2569	74.93	109.98	-	300
▲	170454	J-262-2569	104.90	154.94	-	250
∞	176577	JC-1125-2569	28.58	-	45.72	1
∞	176578	JC-2250-2569	57.15	-	45.72	1
▲	176600	J-260-2569	55.12	85.09	-	500
▲	176624	J-391-2569	82.55	57.15	-	500
▲	176625	J-371-2569	88.90	127.00	-	300

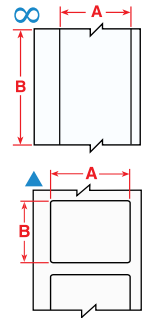


Repositionable Vinyl Labels

(B-2581)

- Specialised adhesive lets you stick, unstick and reposition with ease
- Ideal for Lean/5S and work in process labelling as well as warehousing racks, bins and storage



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Length B (m)	Labels per Roll
∞	170455	JC-1125-2581	28.58	45.72	1
∞	170456	JC-2250-2581	57.15	45.72	1
∞	170457	JC-4000-2581	101.60	45.72	1

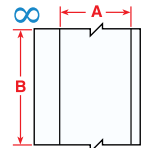


BS 5609 Marine Labels

(B-2585)

- BS 5609 Sections 2 and 3 certified to ensure labels stay compliant, stuck and seen during marine transport
- Ideal for GHS, hazardous materials, drum labelling, marine, transportation (DOT), storage and pharmaceutical labelling



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
∞	170469	JC-4000-2585	101.60	-	45.72	1
▲	170470	J-261-2585	74.93	101.60	-	300
∞	176586	JC-2250-2585	57.15	-	45.72	1
▲	176619	J-260-2585	55.12	85.09	-	500
▲	176620	J-262-2585	104.90	154.94	-	250

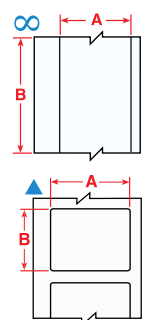


Vinyl Material

(B-2595)

- Low-shrink vinyl with ultra-aggressive adhesive is versatile for the widest array of applications
- Ideal for Lean/5S, general facility, pipe marking, OSHA/ANSI, PPE, machine labels and tags, quality and control, lockout, GHS and chemical, warehousing, general laboratory and more



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Diameter C (mm)	Labels per Roll
∞	170458	JC-4000-2595	101.60	-	45.72	-	1
▲	170459	J-179-2595	25.40	25.40	-	-	1000
✕	170476	J-388-2595	-	-	-	25.40	500
✕	170477	J-390-2595	-	-	-	50.80	500
∞	176580	JC-1125-2595	28.58	-	45.72	-	1
∞	176581	JC-2250-2595	57.15	-	45.72	-	1
∞	176582	JC-3000-2595	76.20	-	45.72	-	1
▲	176601	J-260-2595	55.12	85.09	-	-	500
▲	176602	J-18-2595	76.20	25.40	-	-	1000
▲	176603	J-261-2595	74.93	109.98	-	-	300
▲	176604	J-262-2595	104.90	154.94	-	-	250
▲	176626	J-386-2595	38.10	38.10	-	-	1000
▲	176627	J-387-2595	50.80	50.80	-	-	500
▲	176628	J-372-2595	73.03	38.10	-	-	1000
▲	176629	J-373-2595	98.43	48.26	-	-	500
✕	176630	J-389-2595	-	-	-	38.10	500

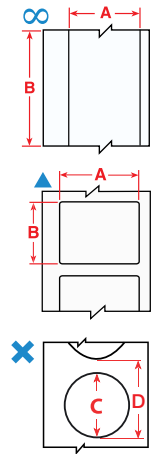


Water Dissolvable Paper Labels

(B-403)

- Complete label and adhesive removal in 30 seconds using warm water
- Ideal for laboratories, temporary identification needs and work in process



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
∞	170460	JC-2250-403	57.15	-	45.72	1
▲	170461	J-17-403	50.80	25.40	-	1000
▲	170462	J-55-403	101.60	50.80	-	750
∞	176583	JC-1125-403	28.58	-	45.72	1
▲	176605	J-19-403	76.20	50.80	-	750

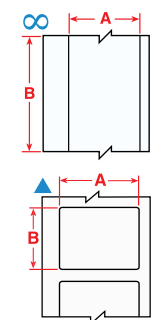


Chemical Resistant Polypropylene Material (B-7425J)

- Built tough to outlast liquid nitrogen, autoclave conditions and harsh chemicals
- Ideal for laboratory labelling (specimen, slide, tube and vial) as well as GHS, hazardous materials, drums, transportation (DOT) and pharmaceutical applications



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
∞	170463	JC-4000-7425J	101.60	-	45.72	1
▲	170464	J-256-7425J	33.02	15.24	-	1000
▲	170478	J-156-7425J	48.26	25.40	-	1000
▲	170479	J-152-7425J	25.40	9.53	-	1000
∞	176584	JC-1125-7425J	28.58	-	45.72	1
∞	176585	JC-2250-7425J	57.15	-	45.72	1
▲	176606	J-179-7425J	25.40	25.40	-	1000
▲	176607	J-59-7425J	25.40	12.70	-	1000
▲	176608	J-136-7425J	38.10	19.05	-	1000
▲	176609	J-235-7425J	38.10	25.40	-	1000
▲	176610	J-258-7425J	38.10	44.45	-	1000
▲	176611	J-137-7425J	50.80	25.40	-	1000
▲	176613	J-53-7425J	50.80	12.70	-	1000
▲	176614	J-260-7425J	55.12	85.09	-	500
▲	176615	J-18-7425J	76.20	25.40	-	1000
▲	176616	J-19-7425J	76.20	50.80	-	750
▲	176617	J-261-7425J	74.93	109.98	-	300
▲	176618	J-262-7425J	104.90	154.94	-	250
⊕	176631	J-249-7425J	25.40	9.53	-	1000
⊕	176633	J-251-7425J	25.40	12.70	-	1000
●	176634	J-88-7425J	25.40	19.05	-	1000
●	176635	J-37-7425J	12.70	38.10	-	1000
▲	176636	J-371-7425J	88.90	127.00	-	300

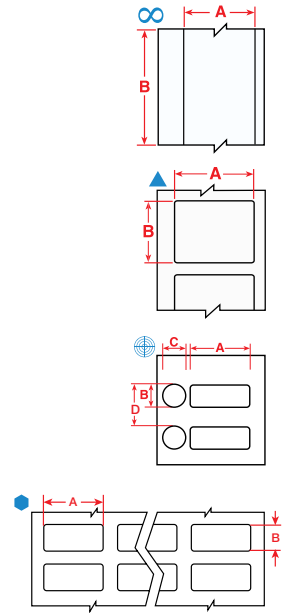


Acrylic Overlaminates (B-910)

- Enjoy long-lasting protection indoors and out with acrylic overlaminates for BradyJet labels, offering superior UV and abrasion resistance
- Available in pre-cut sizes or continuous rolls



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Label Length B (m)	Labels per Roll
∞	149257	LAM-6000-910	165.10	-	36.56	1
∞	149258	LAM-4000-910	114.30	-	36.56	1
∞	149259	LAM-2250-910	69.85	-	36.56	1
∞	149260	LAM-8000-910	215.90	-	36.56	1
▲	175440	LAM-260-910	91.44	61.47	-	340
▲	175441	LAM-261-910	116.33	81.28	-	270
▲	175442	LAM-262-910	161.29	111.25	-	200
▲	175443	LAM-265-910	184.15	260.35	-	100
▲	175444	LAM-267-910	217.17	161.29	-	120

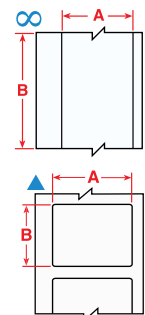


PermaShield™ Labels

- 2-in-1 package that includes a printable label (polyester or vinyl options) plus matching clear polyester overlamine
- Ideal for a wide variety of applications requiring added durability, including product labelling, logos, Right to Know labels, barcodes and safety signs



Diagram	Art. No.	Order Reference	Label Width A (mm)	Label Height B (mm)	Labels per Roll
◇	176648	JPSL-18-2595	76.20	25.40	750
◇	176649	JPSL-18-2475	76.20	25.40	800
◇	176650	JPSL-19-2475	76.20	50.80	500
◇	176651	JPSL-136-2475	38.10	19.05	800
◇	176652	JPSL-137-2475	50.80	25.40	800
◇	176653	JPSL-235-2475	38.10	25.40	800
◇	176654	JPSL-260-2569	55.12	85.09	300
◇	176655	JPSL-260-2595	55.12	85.09	300
◇	176656	JPSL-261-2569	74.93	109.98	250
◇	176657	JPSL-261-2595	74.93	109.98	250

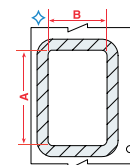

► **Brady is always innovating new ways to help you label. Scan here for our most up to date label assortment.**



Printer Specifications

Printer Specifications	
Print Technology	Inkjet
Print Resolution (dpi)	4800
Print Speed (mm/sec)	30.48
Colour Capability	Full Colour
Max. Label Width (mm)	107.95
Min. Label Width (mm)	17.78
Recommended Usage per Day	5000
Internal Memory Capacity	32 GB, expandable through USB
Connectivity Options	Ethernet USB-C Wi-Fi* USB Host
Software Compatibility	Brady LINK360® Brady Workstation Windows based driver for 3rd party software use
Bar Code Type	More through Brady WorkStation, More through software
Built-in Symbols	Dependant on software

Physical Properties	
Dimensions	376.30 mm (W) x 230.89 mm (H) x 515.70 mm (D)
Weight (kg)	16.33
Device Indicators	Application LED Power LED
Cutter	After label, at end of job or no cutoff Standard Cutter Straight Cut Without label retention
Warranty	2 years

* Wi-Fi available on selected models



Belgium & Luxembourg

+32 (0) 52 45 78 11
benelux@bradycorp.com

Czech Republic

+420 776 302 229
czechrepublic@bradycorp.com

Denmark

+45 66 14 44 00
denmark@bradycorp.com

France

+33 (0) 3 20 76 94 48
france@bradycorp.com

Germany, Austria & Switzerland

+49 (0) 6103 7598 660
germany@bradycorp.com

Hungary

+36 23 500 275
hungary@bradycorp.com

Italy

+39 02 26 00 00 22
italy@bradycorp.com

Netherlands

+31 (0)70 323 62 98
benelux@bradycorp.com

Norway

+47 70 13 40 00
norway@bradycorp.com

Poland

+48 22 104 6262
poland@bradycorp.com

Qatar, Saudi Arabia & UAE

+971 4881 2524
me@bradycorp.com

Slovakia

+421 902 939 406
slovakia@bradycorp.com

South Africa

+27 11 704 3295
africa@bradycorp.com

Spain & Portugal

+34 900 902 993
spain@bradycorp.com
portugal@bradycorp.com

**Sweden, Finland, Estonia, Latvia,
Lithuania**

+46 (0) 8 590 057 30
sweden@bradycorp.com

Turkey

+90 212 264 02 20
turkey@bradycorp.com

UK & Ireland

+44 (0) 1295 228 288
uk@bradycorp.com

Our mission is to identify and protect people,
products and premises



To help minimise our impact on the environment,
Brady limits its number of reprints.

Updated versions are always available for
download on www.bradyeurope.com.

Search for: EUR-M-447-EN



Y6156533

Your distributor